


## How To Assemble Your AMPS Adapter

Assemble your iPad cradle per the instructions included from National Products (Ram-Mount). Attach the iPad cradle to the AMPS Adapter using (4) machine screws and (4) nylon insert nuts. Tighten the nylon insert nuts.

NOTE: 7/32" and 2mm Allen wrenches are included for assembly/disassembly. Keep these in a safe place.

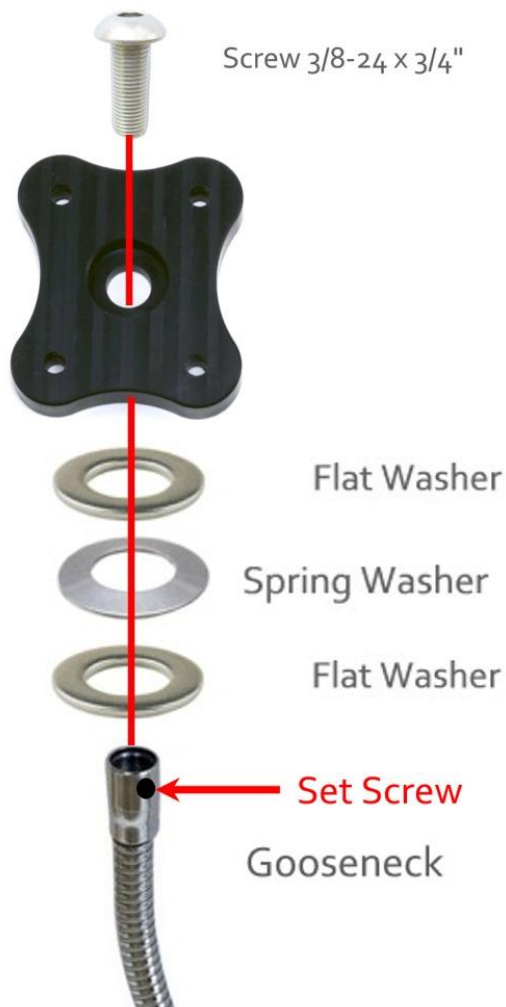

### TOOLS REQUIRED:

1. Phillips screwdriver
2. Pliers or adjustable wrench
3. 7/32" Allen wrench (included)

**WARNING:** Prior to inserting the 3/8" screw, you must first loosen the 4mm set screw. After tightening the 3/8" screw, GENTLY tighten the set screw.

When reassembling your SnakeClamp, tighten the 3/8" screw so that the spring washer is about half compressed. Then gently tighten the set screw.

**IMPORTANT:** If you wish to disassemble your SnakeClamp, loosen the set screw using the included 2mm Allen Wrench PRIOR to removing the 3/8" screw.

- SnakeClamp Products -

[www.SnakeClamp.com](http://www.SnakeClamp.com)

[support@snakeclamp.com](mailto:support@snakeclamp.com)

**snakeclamp**