


Assembly Instructions for Heavy-Duty iPad & Tablet Attachment

Assemble the Ram-Mount cradle per the instructions included from National Products (Ram-Mount). Attach the cradle to the AMPS Adapter using (4) machine screws and (4) nylon insert nuts as shown. Tighten the nylon insert nuts.

NOTE: 7/32" and 2mm Allen wrenches are included for assembly/disassembly. Keep these in a safe place.

TOOLS REQUIRED: 7/32 and 2mm Allen wrenches (included), phillips-head screwdriver

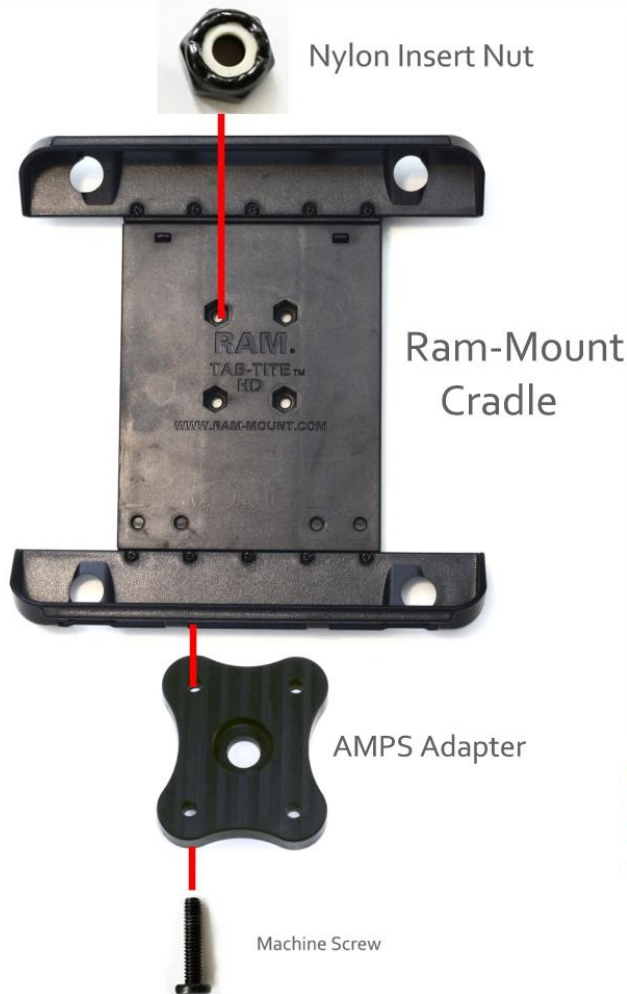

IMPORTANT: If you wish to disassemble your SnakeClamp, loosen the set screw using the included 2mm Allen Wrench PRIOR to removing the 3/8" screw.

SnakeClamp Products LLC

www.SnakeClamp.com support@snakeclamp.com

