


How To Assemble Your iPad Attachment

Place the device bracket onto the 4-point adapter and slide until it snaps into the locked position. You will feel it "click."

NOTE: 7/32" and 2mm Allen wrenches are included for assembly/disassembly. Keep these in a safe place.

TOOLS REQUIRED: 2 mm and 7/32" Allen wrench (included)

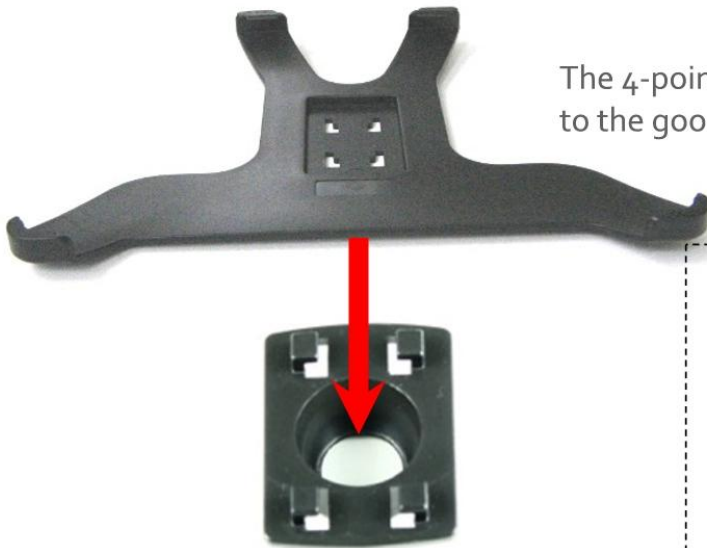

The 4-point adapter may be pre-assembled to the gooseneck arm.

May Be Pre-Assembled:



When reassembling your SnakeClamp, tighten the 3/8" screw so that the spring washer is about half compressed. Then GENTLY tighten the set screw.

IMPORTANT: If you wish to disassemble your SnakeClamp, loosen the set screw using the included 2mm Allen Wrench PRIOR to removing the 3/8" screw.

SnakeClamp Products LLC

www.SnakeClamp.com

support@snakeclamp.com

The logo for SnakeClamp, featuring the word "snakeclamp" in a bold, lowercase font. The "s" is red, and the "nakeclamp" is black. A red graphic of a snake's head and neck is positioned above the "e" and "c".