


How To Assemble Your Magnet Base

Loosen the set screw at the end of the gooseneck arm. Then attach the gooseneck to the magnet base using the short 3/8" screw. Insert lock washer and washers as shown. GENTLY tighten the set screw.

TOOLS REQUIRED: 2 mm and 7/32" Allen wrench (included)

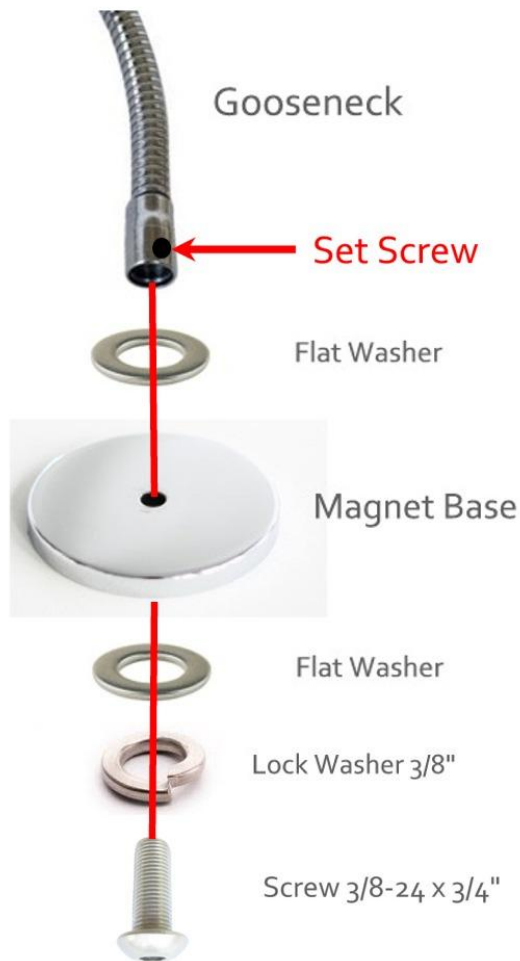

WARNING: Prior to inserting the 3/8" screw, you must first loosen the 4mm set screw. After tightening the 3/8" screw, GENTLY tighten the set screw.

- SnakeClamp Products -

www.SnakeClamp.com

support@snakeclamp.com

snakeclamp