


How To Assemble Your Mini-Universal Attachment

Place the 4-point adapter into the slots on the back of the Mini-Universal bracket and slide until it snaps into the locked position.

TOOLS REQUIRED: 2 mm and 7/32" Allen wrench (included)

The 4-point adapter may be pre-assembled to the gooseneck arm

WARNING: Prior to inserting the 3/8" screw, you must first loosen the 4mm set screw. After tightening the 3/8" screw, GENTLY tighten the set screw.

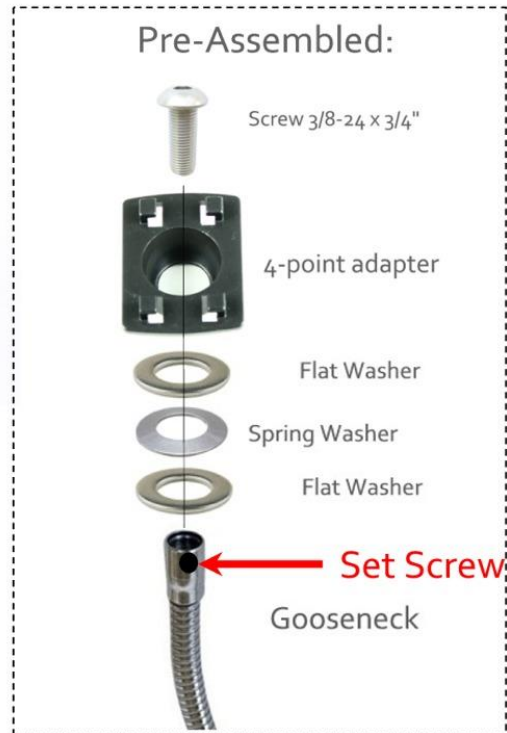

- SnakeClamp Products -

www.SnakeClamp.com

support@snakeclamp.com

The logo for SnakeClamp, featuring a stylized red snake head with a white 'x' on its forehead, positioned above the word "snakeclamp" in a bold, lowercase, sans-serif font.