


Assembly Instructions for Plate Mount

Attach the gooseneck arm to the plate mount using one 3/8" flat-head screw. Insert lock washer and washer as shown. Use allen wrench to tighten.

NOTE: 7/32" and 2mm Allen wrenches are included for assembly/disassembly. Keep these in a safe place.

TOOLS REQUIRED: 2 mm and 7/32" Allen wrench (included)

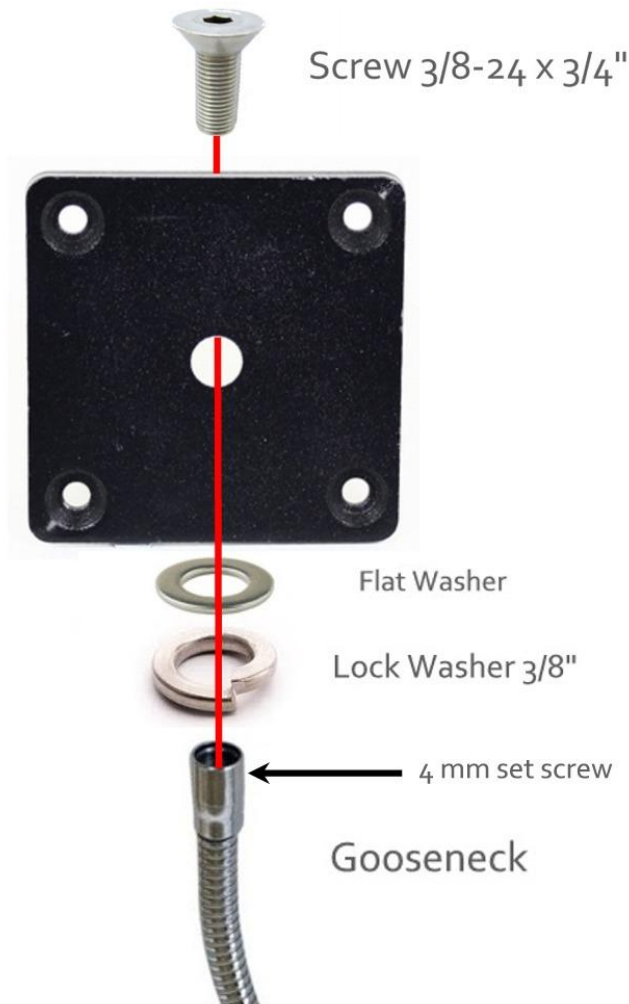

NOTE: Prior to inserting the 3/8" screw, you must first loosen the 4mm set screw. After tightening the 3/8" screw, GENTLY tighten the set screw.

SnakeClamp Products LLC

www.SnakeClamp.com support@snakeclamp.com

The logo for SnakeClamp, featuring the word "snakeclamp" in a bold, lowercase, sans-serif font. The "s" is red, and the "nakeclamp" is black. Above the "e" in "snake" is a red graphic of a snake's head and neck, with a small 'x' above it.